
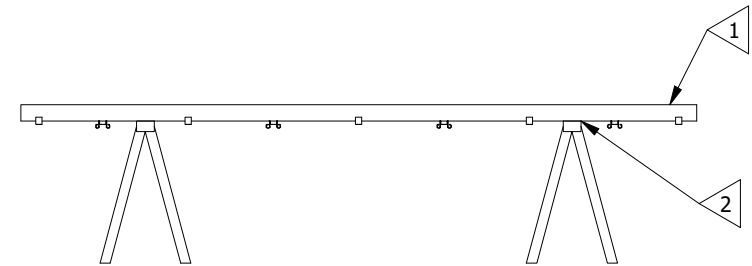
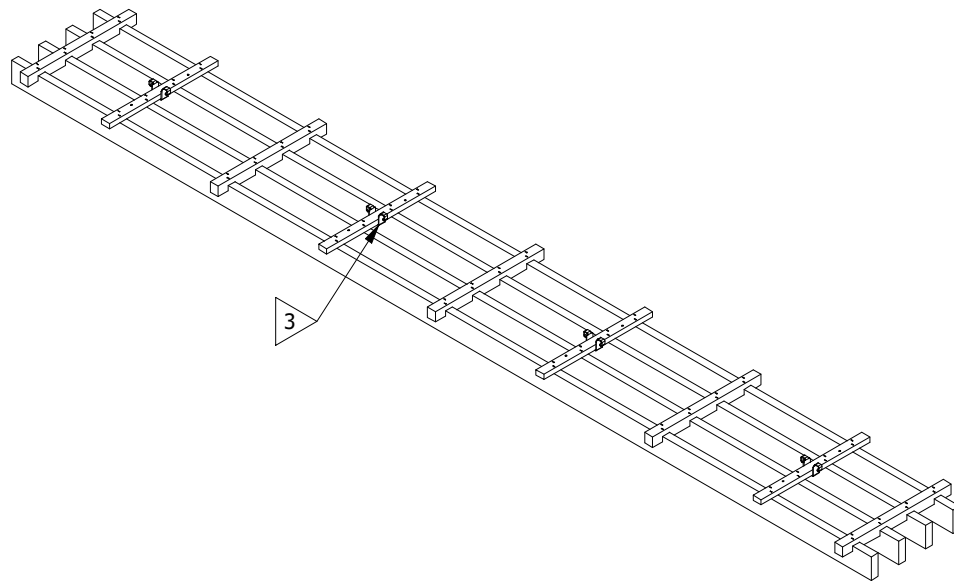


NOTES:

1. PANELS CAN BE FLIPPED UPSIDE DOWN TO INSTALL TORSION SPRING BRACKETS ONTO THE PANEL
2. TAKE CARE NOT TO BEND THE BRACKET TABS WHILE INSTALLING THE BRACKETS; PLACE UPSIDE DOWN PANEL ON SAW HORSES WITH THE TOP OF THE SLATS RESTING ON THE SAW HORSES (NOT THE BACKERS)
3. INSTALL TORSION SPRING BRACKETS ONTO FLAT BACKERS
4. A BIT EXTENDER ASSISTS WITH ASSEMBLING BRACKETS ONTO TIGHTER OR DEEPER SLAT SPACING PANELS

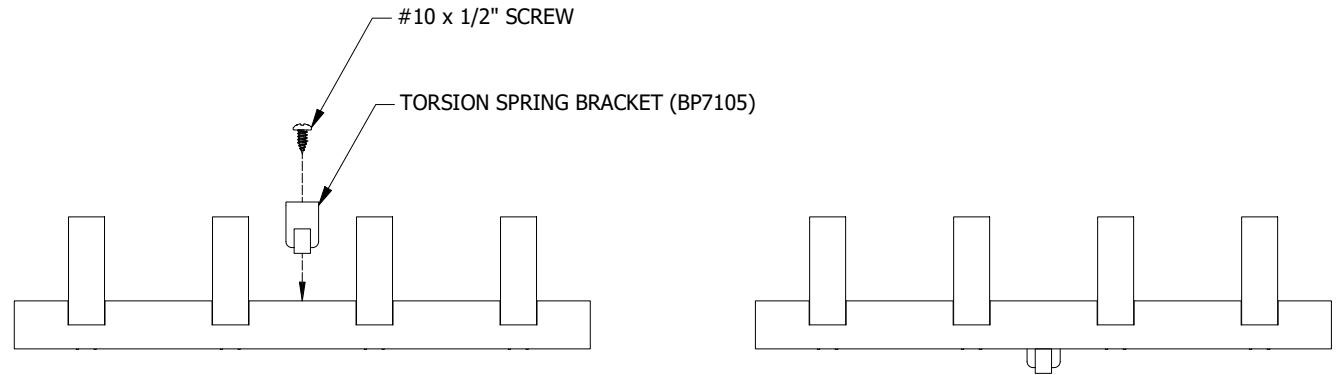

WOODWORKS GRILLE FORTÉ
TORSION SPRING BRACKET INSTALLED ON PANEL

DRAWN BY: APF

DATE: 11/2/2022

PD

These drawings show typical conditions which the Armstrong products depicted are installed. They are not a substitute for an architect's or engineer's plan and do not reflect the unique requirements of local building codes, laws, statutes, ordinances, rules and regulations (Legal Requirements) that may be applicable for a particular installation. Armstrong does not warrant, and assumes no liability for the accuracy or completeness of the drawings for a particular installation or their fitness for a particular purpose. The user is advised to consult with a duly licensed architect or engineer in the particular locale of the installation to assure compliance with all legal requirements. Armstrong is not licensed to provide professional architecture or engineering design services.