



NOTES:

1) INSTALL PLANKS TO LINEAR CARRIERS IN THE FOLLOWING PRESCRIBED SEQUENCE OF OPERATIONS


1) INSTALL AND SUSPEND LINEAR CARRIERS AS NEEDED

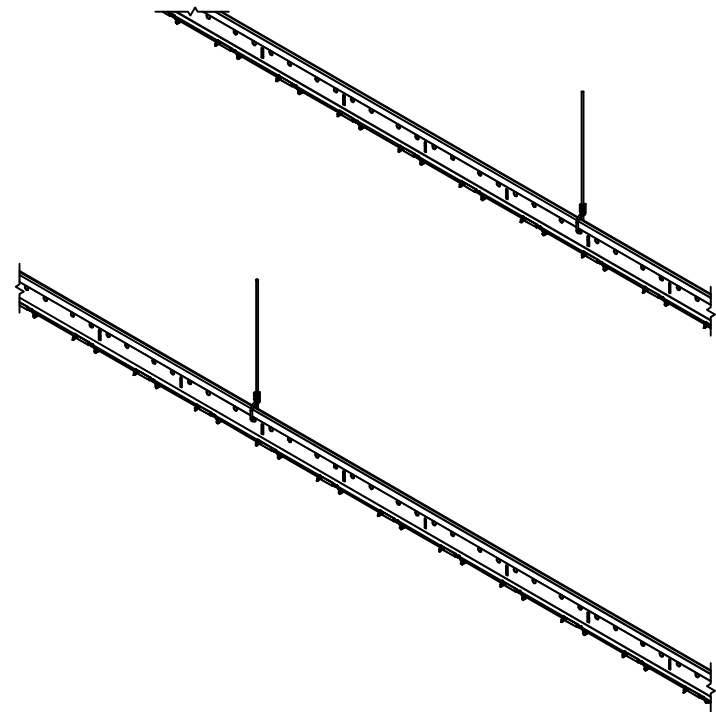


2) INSTALL STABILIZER BARS ON TO BULBS OF LINEAR CARRIERS TO KEEP CARRIERS ALIGNED. SPACE STABILIZER BARS 6' O.C. ALONG LENGTH OF CARRIERS

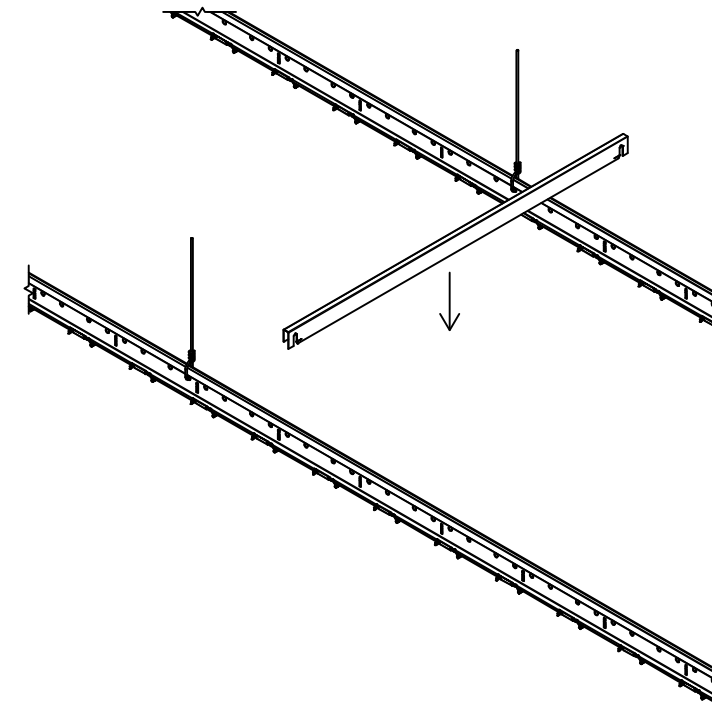

3) INSTALL PLANKS TO LINEAR CARRIERS BY ATTACHING GROOVES OF PLANKS TO FACTORY APPLIED CLIPS ON CARRIERS

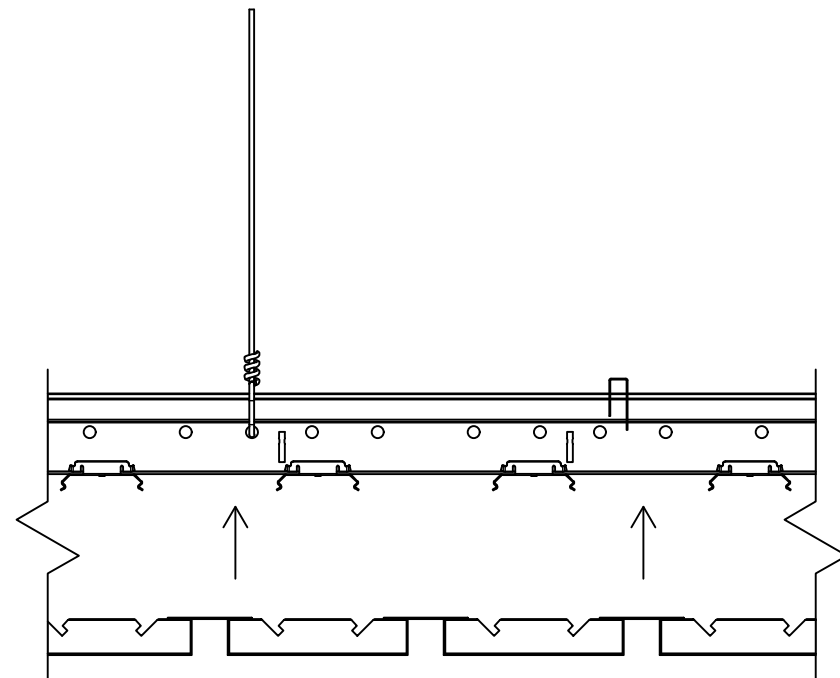

4) AS PLANKS INSTALLATION PROGRESSES, REMOVE STABILIZER BARS AND RE-USE THEM WHERE NEEDED

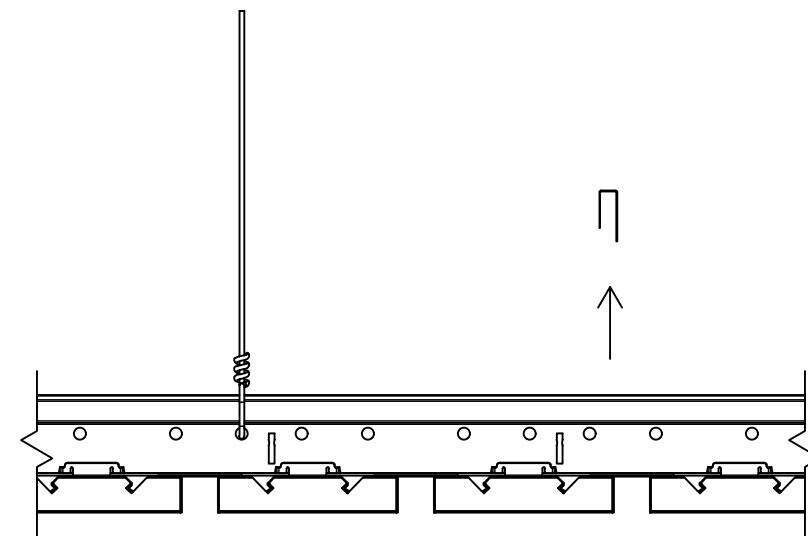

Armstrong
CEILING & WALL SOLUTIONS

WOODWORKS LINEAR VENEERED OPEN
PLANKS INSTALLATION TO LINEAR CARRIERS GUIDE

DRAWN BY: PRW DATE: 4/6/2023 PD

These drawings show typical conditions which the Armstrong products depicted are installed. They are not a substitute for an architect's or engineer's plan and do not reflect the unique requirements of local building codes, laws, statutes, ordinances, rules and regulations (Legal Requirements) that may be applicable for a particular installation. Armstrong does not warrant, and assumes no liability for the accuracy or completeness of the drawings for a particular installation or their fitness for a particular purpose. The user is advised to consult with a duly licensed architect or engineer in the particular locale of the installation to assure compliance with all legal requirements. Armstrong is not licensed to provide professional architecture or engineering design services.